


## Quickstart Card

**What's in the Polaroid PhotoMAX  
PDC 1100 Digital Camera Creative Kit?**

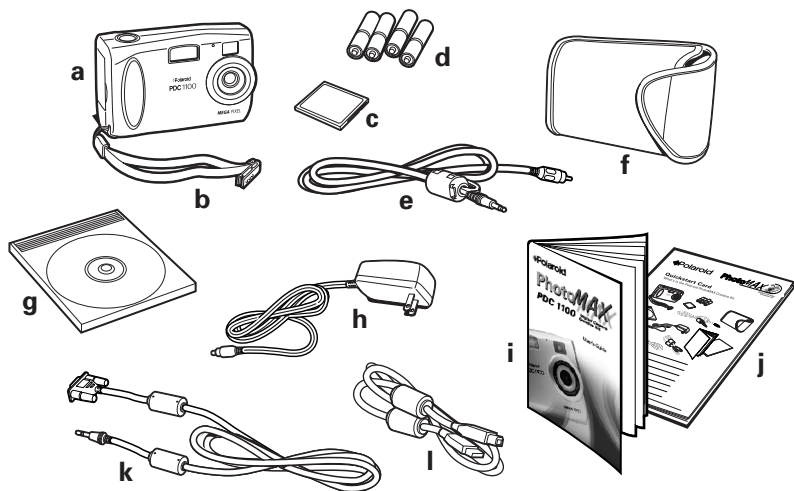

- |          |   |
|----------|---|
| <b>a</b> | Polaroid PDC 1100 Digital Camera              |
| <b>b</b> | Wrist strap (with removable memory clip)      |
| <b>c</b> | 4 MB removable memory card                    |
| <b>d</b> | Four AA batteries                             |
| <b>e</b> | Video cable                                   |
| <b>f</b> | Camera case                                   |
| <b>g</b> | Polaroid PhotoMAX Image Maker Software CD-ROM |
| <b>h</b> | AC adapter                                    |
| <b>i</b> | Polaroid PhotoMAX PDC 1100 User's Guide       |
| <b>j</b> | Quickstart card                               |
| <b>k</b> | RS-232C serial cable                          |
| <b>l</b> | USB cable                                     |

# Control panel


The camera has two LCD menus:

- REC (Record) to take photos.
- PLAY (Playback) to review photos stored in memory.

## RECORD



## PLAYBACK

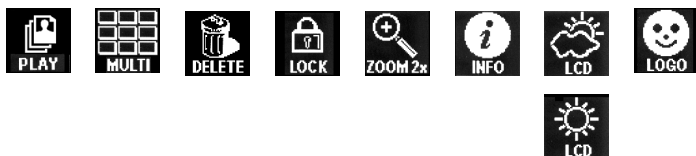

Press the Menu Dial to display menu options, change between Record and Playback mode, and make a selection. Turn the Menu Dial to scroll between different menu choices and settings.

**Refer to the Polaroid**

**PhotoMAX PDC 1100 User's Guide for more information.**

# Status panel display

## Pixel resolution/color setting

- Color: low to super
- Black & white: low to super

## Number of images remaining

- 36 - Low resolution
- 16 - Medium resolution
- 12 - High resolution
- 6 - Super resolution

## Memory card & battery status

- Memory card in slot
- No memory card in slot (blinking)
- Battery good
- Battery low

## Flash setting

- Autoflash
- Fill flash on
- Flash off
- Red eye reduction

## Lens setting


- Auto focus
- Macro
- Infinity
- Fixed focus: 3, 7, 16 ft

## Exposure setting




- Normal
- Light +1, +2, +3, +4
- Darken -1, -2, -3, -4

## Self-timer setting

- On/off

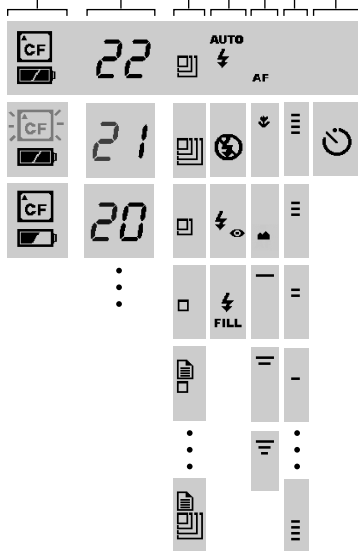

# Camera features

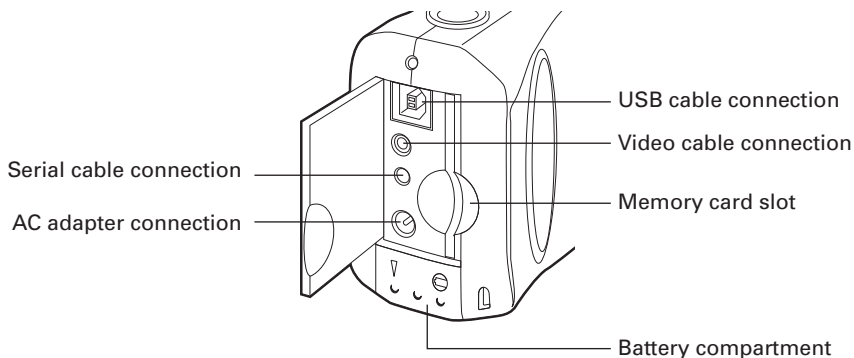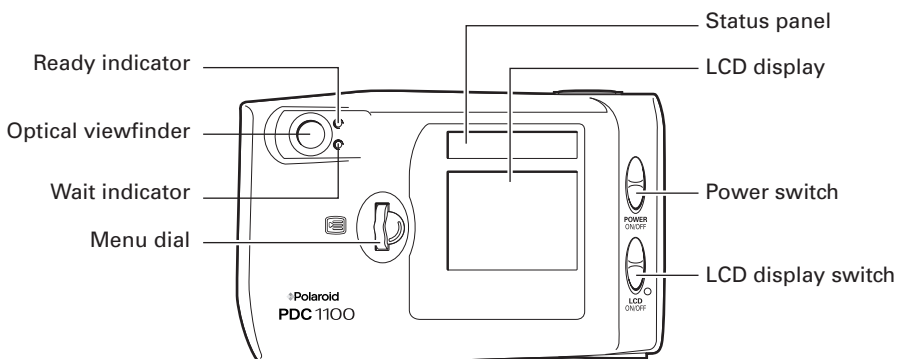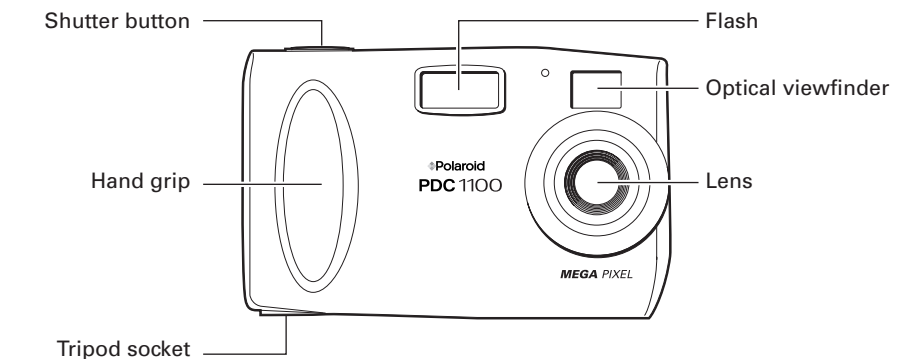

# Getting the camera ready

## Load batteries

Open the battery compartment. Slide the cover lock to the unlocked position and push forward to open.



Insert four AA batteries into the compartment.

***Do not mix old batteries with new batteries, or different manufacturer's batteries together.***

To extend battery life, use the AC adapter whenever possible or purchase rechargeable batteries.

Connect one end of the AC adapter to the AC power connector on the camera.

Connect the other end to a grounded electrical outlet.

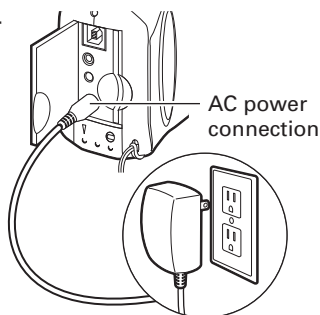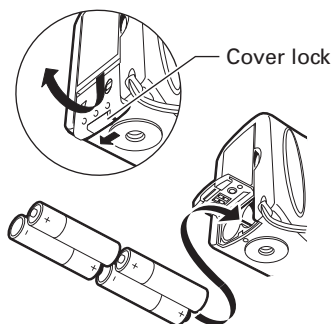

## Attach wrist strap

Attach the wrist strap to the camera as shown.

## Insert memory card

Turn the camera power off.


Insert the memory card into the slot (with the label side of the card facing the rear of the camera).

Use the clip to remove the memory card from the camera.



***Do not insert or remove the memory card while the camera power is on.***


You must insert the memory card before you can turn on the camera.

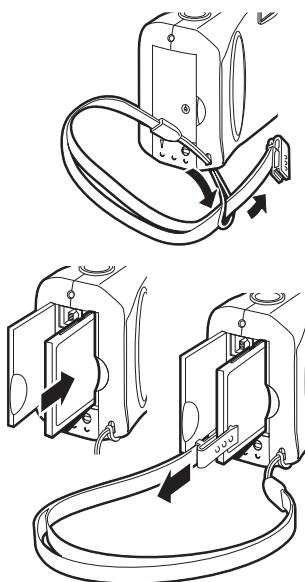

# Taking photos

You can take a photo using the optical viewfinder or the LCD display.

Use the optical viewfinder to save battery power.

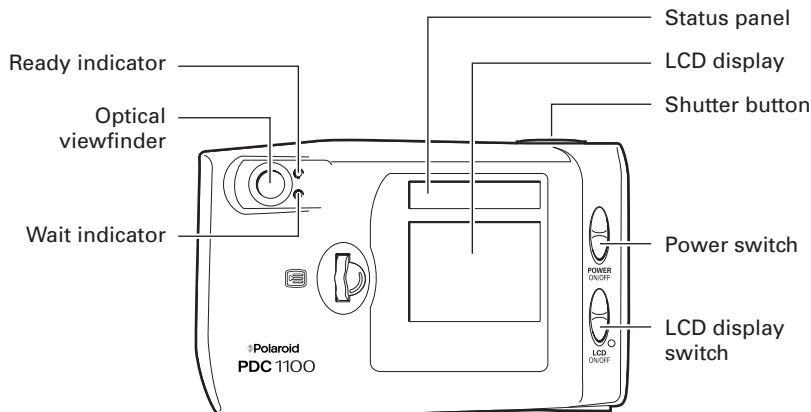

Use the LCD display to frame photos when using the Macro lens setting. See the *User's Guide* (included in kit) for more information on changing camera settings.



- 1 Slide the power switch up to turn on the camera.





- 2 Slide the LCD display switch up to turn on the LCD display if needed.

- 3 Wait until the flash has charged. The flash icon blinks on the Status panel display while the flash is charging. You cannot take a photo while the flash is charging.



Flash icon blinks until flash is ready

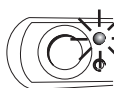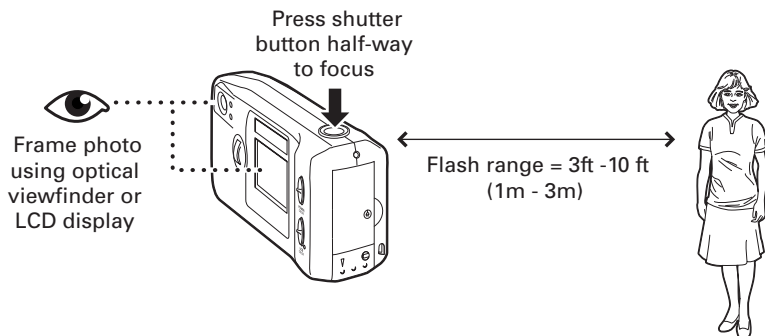

Wait until the green LED light appears. The camera is now focused and ready to take a photo.

- 4** Hold the camera steady and press the shutter button down firmly.



The red LED light appears and the photo appears on the LCD display while it processes. Wait until the image is fully processed before taking another photo.

## ***Transferring photos to your computer***


There are two ways of transferring digital photos to your computer.

- RS-232 Serial port connection.
- USB port connection. USB supported only for Windows 98.

You can also purchase an optional external memory card reader. See your computer retailer for more information.

## ***To connect using the serial cable***

- 1 Turn off your computer and all peripherals (scanner, printer).
- 2 Connect the serial cable to the serial port on the camera and then to your computer.
- 3 Connect the AC adapter to the AC power connection on the camera.
- 4 Plug the AC adapter into a grounded electrical outlet.
- 5 Turn on your computer.
- 6 Turn on your camera.
- 7 Double click the Polaroid PhotoMAX icon on your desktop.

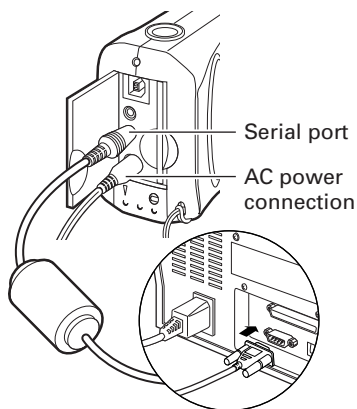

## ***To connect using the USB cable***

- 1 Connect the USB cable to the USB port on the camera and then to your computer.
- 2 Connect the AC adapter to the AC power connection on the camera.
- 3 Plug the AC adapter into a grounded electrical outlet.
- 4 Turn on your camera.
- 5 Double click the Polaroid PhotoMAX icon on your desktop.

